




**CHARGING METHOD**

The fitting type of gas springs can be charged through the charging plug and can control the charging pressure by using the exhaust valve.




CONTROL PANEL  
PAN6


◆ It is for charging a gas.  
Please refer to the page 111.

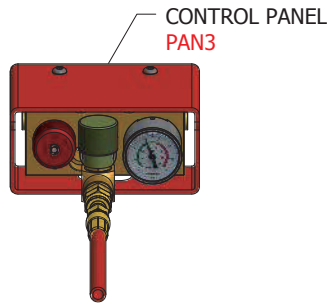


◆ It is for charging a gas.  
Please refer to the page 110.

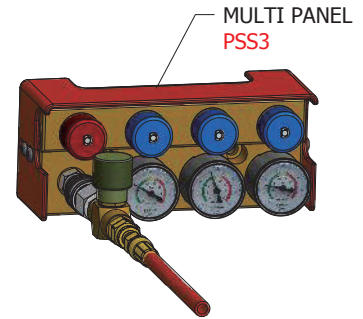

◆ It is for charging a gas.  
Please refer to the page 112.

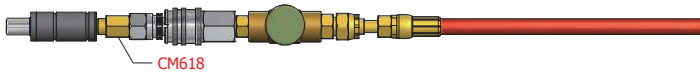

◆ GAS SPRING  
TSP0170 ~ 2400  
TSX0350 ~ 0750  
TSM50 ~ 0750/TTM0300

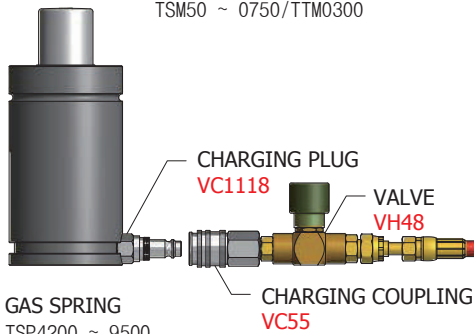


GAS SPRING  
TSP4200 ~ 9500  
TSX1000 ~ 6600  
TST1000 ~ 9500  
TSM1500 ~ 5000  
TSS0750 ~ 5000  
TSL0500 ~ 10000


CHARGING ADAPTOR




PORT ADAPTOR  
CM618

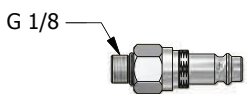


CHARGING PLUG  
VC1118

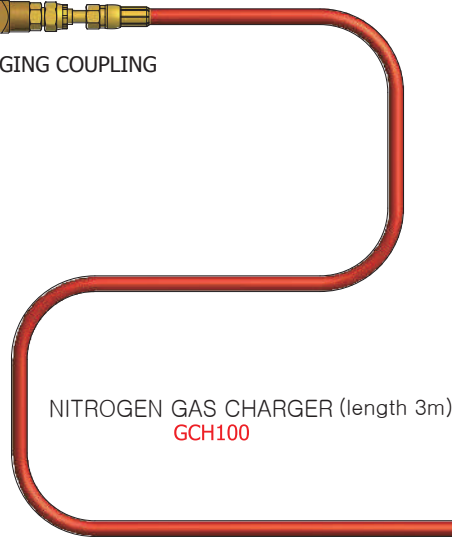

NITROGEN GAS CHARGER (length 3m)  
GCH100

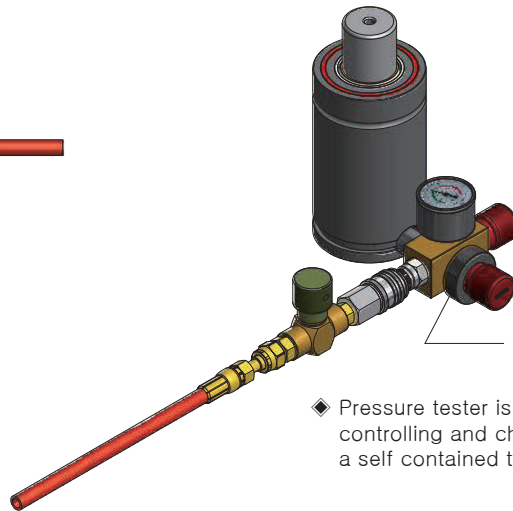

◆ Pressure tester is used for checking, controlling and charging pressure of a self contained type.

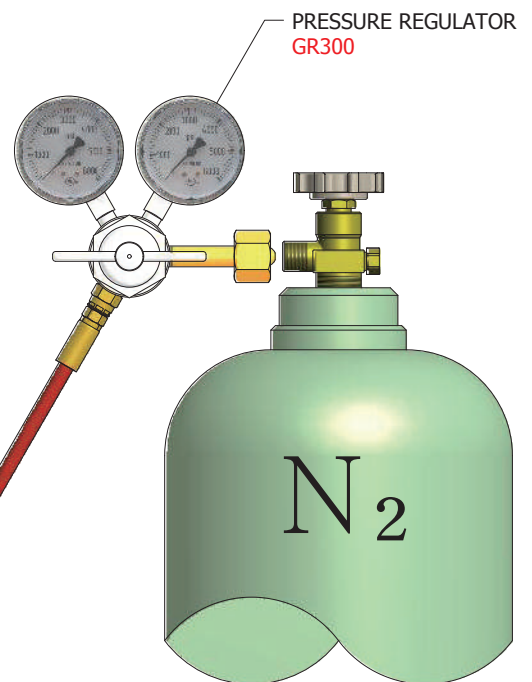

PRESSURE REGULATOR  
GR300

